



Room Operations

for Rooms
2E02 & 2E06

To increase the successful projection of your computer, you should know how to:

- adjust the Resolution Ratio (1024 x 760 pixels)
 - place the computer Display in Dual, Clone, or Mirror Mode
-
- Plug the VGA cable into the **To Switcher** jack on the Wall Plate. If needing audio, plug the mini audio cable into the mini audio adapter jack on the Wall Panel.
 - Plug the opposite end of the VGA cable into the computer's **VGA Out** jack and the mini audio cable into the **Headphones Out** jack.

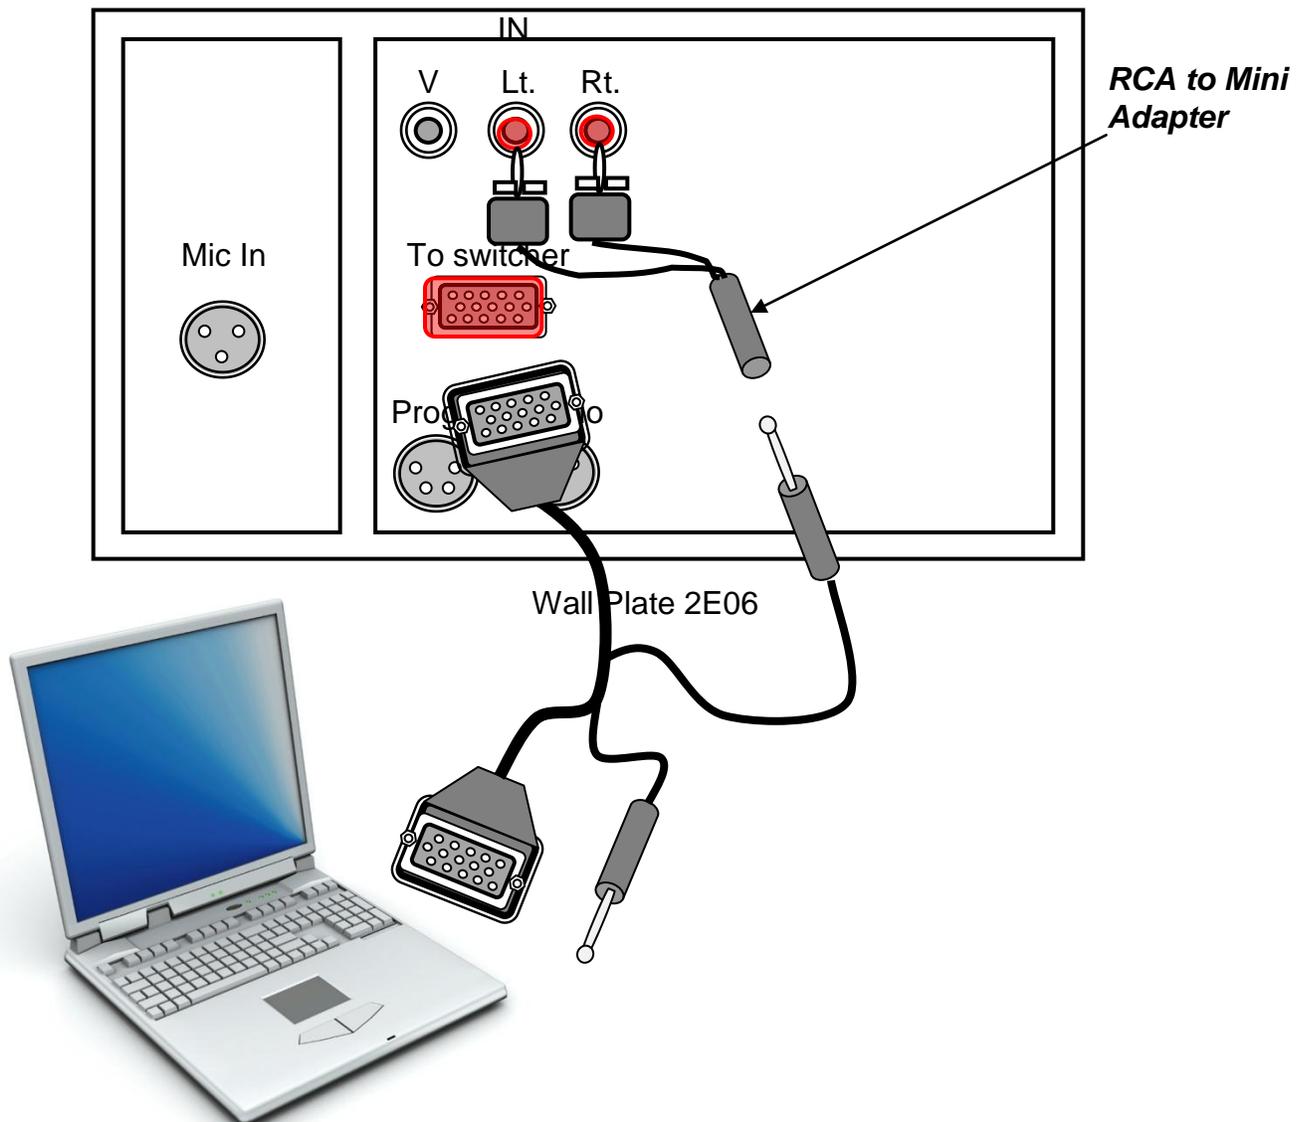


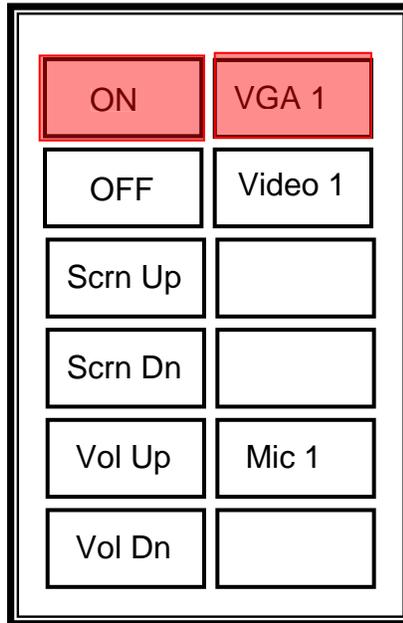

Wall Controller

Using The Wall Controller:

- Press the **On** button to start the projector.
- Press the **VGA 1** button.
- Turn on the computer.
- Lower the screen using the white toggle switch on the wall.

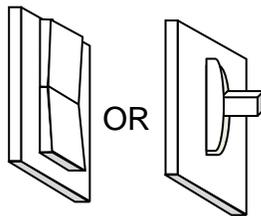


Screen Toggle Switch

It takes about a minute for the projector to be ready, after which you should see the computer's desktop projected on the screen.

- If the desktop is not showing, check to make sure the Resolution Ratio of the computer is set to 1024 x 760.
- Also check that the computer is **NOT** in Extended Monitor mode, **but** in **Clone, Identical or Mirror Monitor** mode.
(Windows OS: right click on the desktop go to settings. Mac OS: go to the Apple menu under System Preferences, click on Displays.)
- To hear **Audio** from the computer or any media device, turn up the volume on the computer and the Wall Controller.


External Devices

- To project a DVD, VHS, or any external device, plug the device into the Wall Plate's AV **Video and Audio In** jacks.

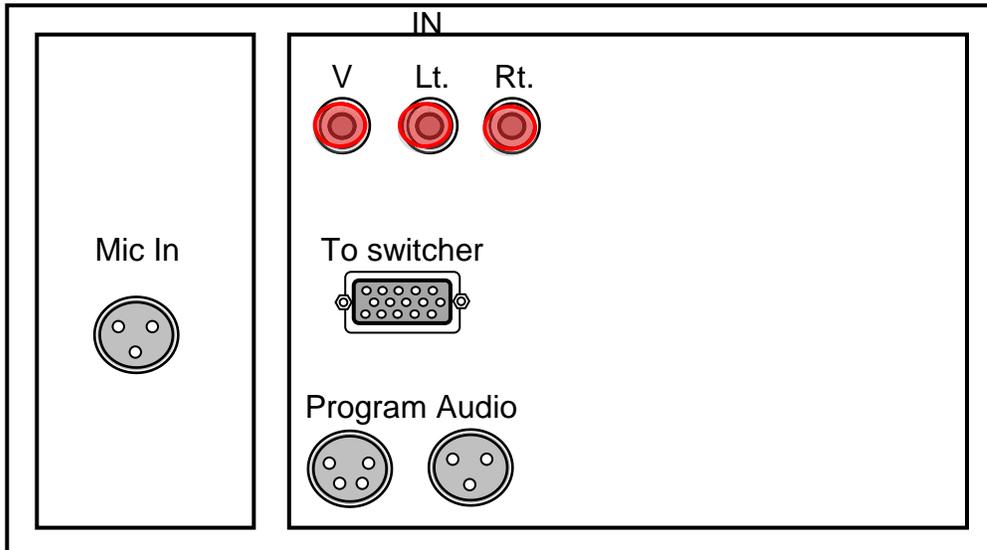

Wall Plate 2E06

- Press the **Video 1** button on the Wall Controller.
- Adjust the volume with the **Vol Up** or **Vol Dn** buttons.

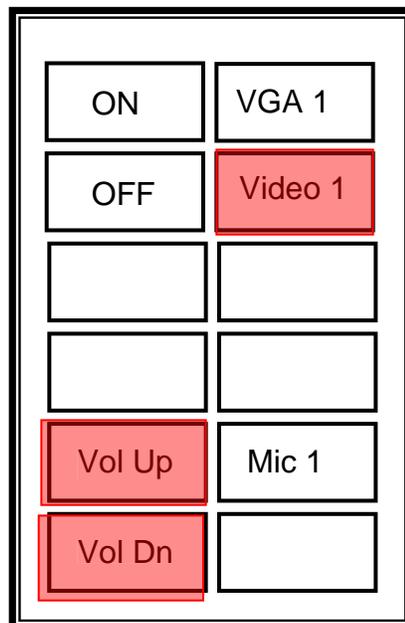

Wall Controller

Please press the Off button on the Wall Panel when finished. Thank you.